


SUPER Quick Fist®

One Piece Rubber Clamp




Installation Instructions:

1. Use three number 10 bolts or screws and appropriate washers to fasten. Do not over tighten.

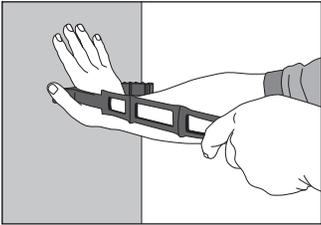

2. After fastening the SUPER QUICK FIST clamp, stretch the strap by putting one hand on the base and use the other to pull in a perpendicular direction several times on the strap.

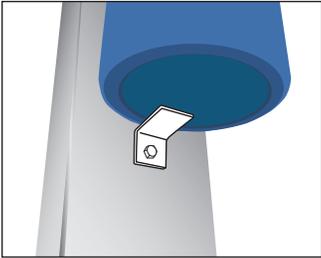

3. If you plan on holding a large cylinder and the base is not supported, it is advisable to use a piece of angle iron, wood block or shelf bracket to support the bottom of the cylinder. This will also make it easier to lock the clamp in place.

4. The strap is divided into three sections. The first holds objects up to 3", the second 5" and the third up to 9.5". If desirable, excess sections can be trimmed off with wire cutters or scissors.

Made in USA

End of the Road, Inc
2212 Dortch Ave.
Nashville, TN 37210, USA
www.endroad.com

U.S. and world wide patents pending
UK patent 2403262 • Made in USA


SUPER Quick Fist®

One Piece Rubber Clamp




Installation Instructions:

1. Use three number 10 bolts or screws and appropriate washers to fasten. Do not over tighten.

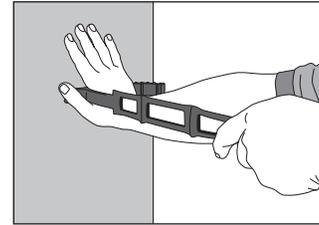

2. After fastening the SUPER QUICK FIST clamp, stretch the strap by putting one hand on the base and use the other to pull in a perpendicular direction several times on the strap.

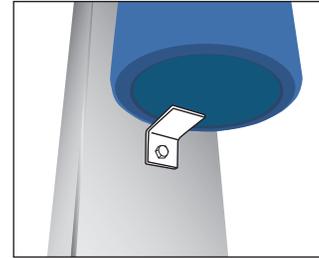

3. If you plan on holding a large cylinder and the base is not supported, it is advisable to use a piece of angle iron, wood block or shelf bracket to support the bottom of the cylinder. This will also make it easier to lock the clamp in place.

4. The strap is divided into three sections. The first holds objects up to 3", the second 5" and the third up to 9.5". If desirable, excess sections can be trimmed off with wire cutters or scissors.

Made in USA

End of the Road, Inc
2212 Dortch Ave.
Nashville, TN 37210, USA
www.endroad.com

U.S. and world wide patents pending
UK patent 2403262 • Made in USA